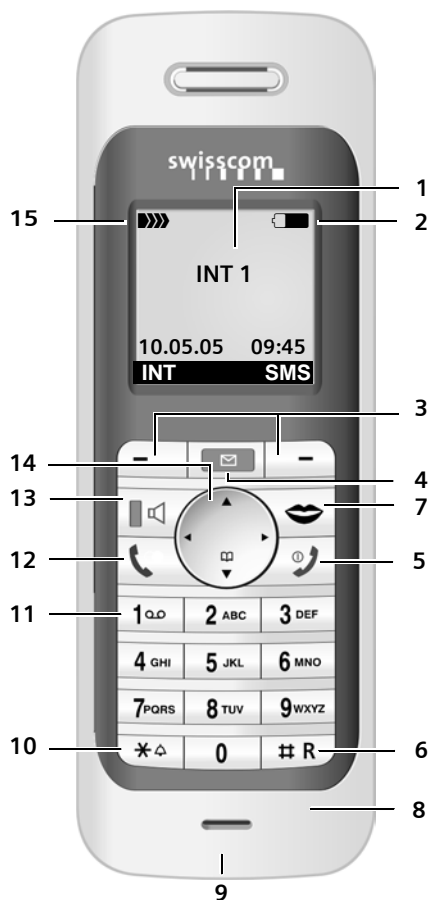




Handset Aton CL300

User guide

Handset at a glance



- 1 **Display** in idle status
- 2 **Charge status of the batteries**
 [Battery icon] (flat to full)
 [Battery icon] flashes: batteries almost flat
 [Battery icon] flashes: batteries charging
- 3 **Display keys** (page 9)
- 4 **Message key**
 Access to calls and message lists;
 Flashes: new message or new call.
- 5 **End call key, On/Off key**
 End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**
 Confer (Flash) (press and hold),
 Toggle between upper/lower case and digits
- 7 **« Swisscom Voice Portal » key**
- 8 **Connection socket** for headset
- 9 **Microphone**
- 10 **Star key**
 Ringtones on/off (press and hold),
 Open table of special characters
- 11 **Key 1**
 Select network mailbox (press and hold)
- 12 **Talk key**
 Answer a call, open last number redial list (press briefly), start dialling (press and hold)
- 13 **Handsfree key**
 Switch between earpiece and handsfree mode;
 Lights up: handsfree activated;
 Flashes: incoming call
- 14 **Control key** (page 8)
- 15 **Signal strength**
 [Signal bars] (high to low)
 [Signal bars] flashes: no reception

Note:

Illustration of a handset on a base station with SMS functionality.

Contents

Handset at a glance	1
----------------------------	----------

Safety precautions	3
---------------------------	----------

Aton CL300 – a handset with many extras 4

First Steps 4

Pack contents	4
---------------	---

Setting up the handset for use	4
--------------------------------	---

Making calls 7

Making an external call	7
-------------------------	---

Ending a call	7
---------------	---

Answering a call	7
------------------	---

Handsfree operation	7
---------------------	---

Muting	8
--------	---

Making internal calls	8
-----------------------	---

Operating the handset 8

Switching the handset on/off	8
------------------------------	---

Control key	8
-------------	---

Display keys	9
--------------	---

Returning to idle status	9
--------------------------	---

Menu guidance	9
---------------	---

"Swisscom Voice Portal" key	9
-----------------------------	---

Correcting incorrect entries	10
------------------------------	----

Using the directory and lists ... 10

Directory	10
-----------	----

Last number redial list	12
-------------------------	----

Opening lists with the message key	12
------------------------------------	----

Using a handset as a room monitor 12

Activating the room monitor and entering the number to be called	13
--	----

Handset settings 14

Changing the display language	14
-------------------------------	----

Setting the display	14
---------------------	----

Setting the screen picture	14
----------------------------	----

Setting display illumination	14
------------------------------	----

Activating/deactivating auto answer	15
-------------------------------------	----

Adjusting the loudspeaker volume	15
----------------------------------	----

Changing ringtones	15
--------------------	----

Activating/deactivating advisory tones	16
--	----

Setting the alarm clock	16
-------------------------	----

Restoring the handset default settings	17
--	----

Appendix 17

Care	17
------	----

Contact with liquid	17
---------------------	----

Faults and Self-help with	
---------------------------	--

Troubleshooting	17
-----------------	----

Warranty/Maintenance/Repair/	
------------------------------	--

Authorisation	18
---------------	----

Repair/Maintenance	18
--------------------	----

Specifications	19
----------------	----

Notes on the operating instructions 20

Symbols used	20
--------------	----

Example: menu input	20
---------------------	----

Example: multiple line input	21
------------------------------	----

Writing and editing a text message	21
------------------------------------	----

Accessories 23

Index 24

Safety precautions

Caution:

Read the safety precautions and the user guide before use. Explain their contents to your children, and the potential hazards associated with using the phone.



Use only the mains adapter supplied, as indicated on the underside of the charging cradle.



Only insert the **recommended rechargeable batteries** (page 19). i.e. Do not use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment (e.g. doctor's surgery).



The handset may cause an unpleasant humming noise in hearing aids.



Do not install the charging cradle in bathrooms or shower rooms. Handset and charging cradle are not splash proof (page 17).



Do not use your phone in environments with a potential explosion hazard (e.g. auto paint shops).



If you give your Aton to someone else, make sure you also give them the user guide.



Information about disposal

At the end of its service life this product must not be disposed of among the normal household refuse. Instead, it must be handed in at a sales outlet or at a collection point for recycling electrical and electronic devices in accordance with regulations governing the return, taking back and disposal of electrical and electronic devices (ORDEA).

The materials can be recycled as indicated. By recycling materials and reusing or utilising old appliances in any other way you are making an important contribution to the protection of the environment.

Note:

- Not all of the functions described in this user guide are available in all countries. CLIP (Calling Line Identification Presentation), SMS (Short Message Services) and "Swisscom Voice Portal": these functions depend on the network provider.

EATONI predictive text: EATONI predictive text helps you when you are writing text messages. It can be activated or deactivated (page 22).

Aton CL300 – a handset with many extras

Your Aton CL300 not only lets you store up to 150 telephone numbers (page 10) - your Aton CL300 can do much, much more:

- ◆ You can designate important people as VIPs so you can tell important calls from the "tone" (page 10).
- ◆ You can store anniversaries (page 11) in your phone and it will remind you of them in advance.
- ◆ Select frequently used phone numbers at the press of a **single** key (page 11).

Have fun using your new Aton CL300!

First Steps

Pack contents

- ◆ one Aton CL300 handset,
- ◆ one charging cradle (incl. mains adapter),
- ◆ two batteries,
- ◆ one battery cover,
- ◆ one belt clip,
- ◆ one user guide (German, French, Italian),
- ◆ one headset.

Setting up the handset for use

Connecting up the charging cradle and mounting it on the wall (if required) is described at the end of these instructions.

Inserting the batteries

Caution:

Only use the rechargeable batteries recommended (page 19)! This means: Never use conventional batteries (non-rechargeable) as this may cause significant damage to health and property. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

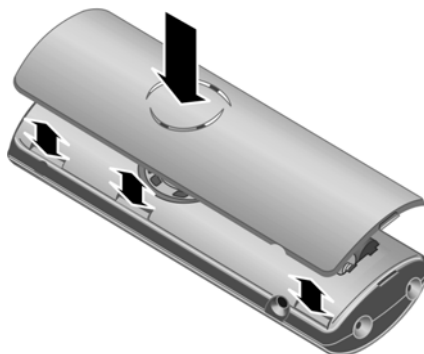
- ▶ Fit the batteries with the correct polarity (see diagram).

The polarity is indicated in/on the battery compartment.



Closing the battery cover

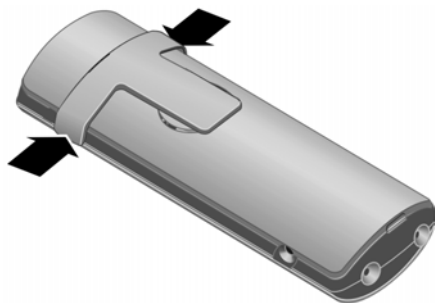
- ▶ First align the battery cover with the notches on the lugs on the inside of the housing.
- ▶ Then press the cover closed so that it clicks into place.



Attaching the belt clip

There are notches for attaching the belt clip on the side of the handset at the same height as the display.

- ▶ Press the belt clip onto the back of the handset so that the lugs on the belt clip click into the notches.



Opening the battery cover

- ▶ If fitted, remove the belt clip.
- ▶ Insert a fingernail into the headset socket cavity and pull the battery cover upwards.



Registering your phone

Before you can use your Aton CL300 you must register it to a base station. It can be registered to a maximum of four base stations. The actual registration procedure will depend on the type of base station.

Automatic registration Aton CL300

Important: The handset must not already be registered to any base station.

Registering the handset to the Aton CL300 base station occurs automatically.

- ▶ Place the handset in the base with its **display facing forward**.

Registration can take up to 5 minutes. During this process, **Regstr.Procedure** appears in the display and the name of the base station flashes e.g. **Base 1**. When the handset has registered, its screen displays its internal number, e.g. **INT 2** for internal number 2. The handset is assigned the lowest available internal number (1-6). If all internal numbers 1-6 have been assigned, number 6 is overwritten, provided the handset with the internal number 6 is in idle status.

Notes:

- Automatic registration is not possible when the base station on which you wish to register the handset is being used to make a call.
- Each key press interrupts the automatic registration.
- If automatic registration does not work, you will have to register the handset manually.

Manual registration Aton CL300

If the handset does not switch on automatically when the batteries are fitted, you must first charge the batteries.

You must activate manual registration of the handset at both the handset and the base station.

After it has registered, the handset returns to idle status. The handset's internal number is shown in the display e.g. **INT 1**. If not, repeat the procedure.

1. On the handset



→ → Handset → Register H/Set



Select base station, e.g. Base 1, and press **OK**.



Enter the system PIN of the base station (the default is 0000) and press **OK**. The screen will display, e.g. Base 1.

2. On the base station

Within 60 secs. press and **hold** the registration/paging key on the base station (page 1) (approx. 3 secs.).

Headset socket

You can connect the following types of headset (with jack connector): HAMA Plantronics M40, MX100, MX150 and the supplied Headset.

Charging batteries

- ▶ Plug the mains adapter of the charging cradle into a mains power socket.
- ▶ Place the handset in the cradle with its display facing forward.

To charge the batteries, leave the handset in the charging cradle. If the handset is activated, the flashing battery icon in the top right of the display indicates that the batteries are charging. During handset operation, the battery icon indicates the charge status of the batteries (page 1).

Initial charging and discharging of batteries

The correct charge level can only be displayed if the batteries are first fully charged **and** discharged.

- ▶ To do this, leave the handset in the charging cradle **continuously** for **ten** hours. Your handset need not be switched on for it to charge.
- ▶ Once the batteries are fully charged, remove the handset from the charging cradle and do not put it back again until the batteries are fully discharged.

Notes:

- The handset should only be placed in a base station or charging cradle that is designed for it.
- When the handset is in the cradle, it charges even if it is switched off.
- If the handset has switched itself off because the batteries are flat and it is then placed in the charging cradle, it will switch itself on automatically.
- After the first battery charge **and** discharge you may replace your handset in the charging cradle after every call.

Please remember:

- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and re-insert them.
- ◆ The batteries may become warm as they are charging. This is not dangerous.
- ◆ After a time the charge capacity of the batteries will decrease for technical reasons.

Setting the date and time

If you have not yet set the date and time, press the display key **Time** to open the input field.

To change the time, open the input field via:



→ → Date/Time

- ▶ Change multiple line input:

Date:

Enter day, month and year in 6-digit format.

Time:

Enter hours and minutes with 4 digits, e.g. for 07:15 a.m.

Save

Press the display key.

Changing the base station

If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (Best Base).



→ Handset → Select Base



Select one of the registered base stations or Best Base and press **OK**.

Making calls

Making an external call

External calls are calls using the public telephone network.



Enter the number and press the talk key.

Or:



Press and **hold** the talk key and then enter the number.

You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.

Notes:

- Dialling using the directory or last number redial list (page 12) saves time re-entering numbers.

Ending a call



Press the end call key.

Answering a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .

If the handset is in the charging cradle and the **Auto Answer** function is activated (page 15), the handset will take a call automatically when you lift it out of the cradle.

If the ringtone is intrusive, press the display key **Silence**. You can take the call so long as it is displayed on the screen.

Handsfree operation

In handsfree mode instead of holding the handset to your ear you can put it down e.g. on the table in front of you to allow others to participate in the call.

Activating/deactivating handsfree

Activating while dialling



Enter the number and press the handsfree key.

- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

Switching between earpiece and handsfree mode



Press the handsfree key.

During a call and when listening to the answering machine (depending on the base station), switch handsfree on or off.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the handsfree key while placing the handset in the base station. If handsfree key does not light up, press the key again.

For how to adjust the volume, see page 15.

Muting

You can deactivate the microphone in your handset during an external call. The other party hears a wait melody.



Press the control key on the left to mute the handset.



Press the display key to reactivate the microphone.

Making internal calls

Internal calls to other handsets registered on the same base station are free.

Calling a specific handset



Initiate internal call.



Enter the number of the handset.

Or:



Initiate internal call.



Select handset.



Press the talk key.

Calling all handsets ("group call")



Initiate internal call.



Press the star key. All handsets are called.

Ending a call



Press the end call key.

Operating the handset


Switching the handset on/off



Press and **hold** the end call key. You will hear the confirmation beep.

Control key



In the following information the side of the control key (top, bottom, right, left) you have to press in each operating situation is shown in black (e.g.  for "press the right of the control key").

The control key has a number of different functions:

When the handset is in idle status



Open the directory.



Open main menu.







Open list of handsets.



Set the ringtones on the handset (page 15).

In the main menu and in input fields

You can use the control key to move the cursor up , down , right  or left .

In lists and submenus



Scroll up/down line by line.



Open submenu or confirm selection.



Go back one menu level, or cancel.

During an external call



Open the directory.



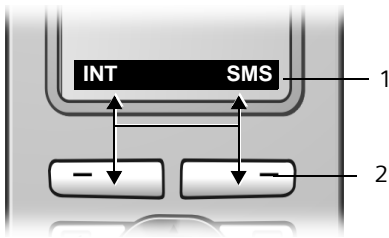
Initiate an internal consultation call.



Adjust loudspeaker volume for earpiece and handsfree mode.

Display keys

The function of the display keys changes depending on the particular operating situation. Example:



- 1 Current display key functions are shown in the bottom display line.
- 2 Display keys

Press the display key below to launch the function.

The most important display symbols are:

	Open the main menu.
	Open a context-dependent menu.
	Delete key: backspace deletes one character at a time.
	Go back one menu level or cancel operation.
	Copy number into directory.
	Open the last number redial list (depending on the base station).

Returning to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Changes that you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or **Save Entry** **OK** will be lost.

An example of the display in idle status is shown on page 1.

Menu guidance

Your telephone's functions are accessed using a menu that has a number of levels.

Main menu (first menu level)

- ▶ Press with the handset in idle status to open the main menu.

The main menu functions are shown in the display as a list with icon and name.

Accessing a function, i.e. opening the corresponding submenu (next menu level):

- ▶ Navigate to the function using the control key . Press the display key **OK**.

Submenus

The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function with the control key and press **OK**.

Or:

- ▶ Enter the corresponding digit combination.

A **short** press on the end call key returns you to the previous menu level / cancels the operation.

"Swisscom Voice Portal" key



Press the key.

Select **Swisscom VP**. You will be directly connected to the Swisscom Voice Portal. The access number 0848 849 850 is pre-programmed and cannot be changed.

Note:

This key allows you to connect to the Swisscom Voice Portal, where you can activate additional services such as call diversion (Service 21, 61 or 67), call waiting (Service 43) or three-party conference with a simple voice command. You can also use voice command to access current sport, news and weather information.

Correcting incorrect entries

You can correct wrong characters in the text by navigating to the wrong input using the control key. You can then:

- ◆ press **<C>** to delete the character to the left of the cursor,
- ◆ insert characters to the left of the cursor,
- ◆ overwrite the character (flashing) when entering the time and date etc.
- ◆ You will find examples of symbols used, menu entries and multiple line input in the appendix to this user guide, page 20.


Using the directory and lists

You can store a maximum of 150 entries in the directory (the actual number depends on the size of the individual entries).

You create the directory for your own individual handset. You can, however, send lists/entries to other handsets or the base station (page 11).

Directory

In the **directory**, you can store numbers and the associated names.

- With the handset in idle status, open the directory by pressing the  key.

Length of entries

Number: max. 32 digits

Name: max. 16 characters

Note:

For quick access to a number from the directory, you can assign the number to a key.

Storing a number in the directory

 → New Entry

- Change multiple line input:

Number :

Enter number.

Name :

Enter name.

Annivers.:

Enter anniversary if required (page 11).

Shortcut:



Select key for quick dial.

- Save changes.



Selecting entries in the directory


 Open directory .

You have the following options:



- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name, or scroll to the entry with  if required.

Dialling with the directory

 →  (select entry)

 Press the talk key. The number is dialled.

Managing entries in the directory

 →  (select entry)

Viewing an entry



View Press the display key.
The entry is displayed.
Back with **OK**.


Editing entries

View **Edit** Press display keys one after the other.

- Carry out changes and save.

Using other functions

 →  (select entry)
→ **Options** (open menu)

The following functions can be selected with :

Display Number

Edit or add to a stored number. Then dial or call up further functions by pressing **Options**.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

VIP Entry (directory only)

Mark a directory entry as **VIP** (Very Important Person) and assign it a particular ringtone. You can then identify VIP calls by their ringtones.

Requirement: caller display ("CLIP")

Copy Entry

Send a single entry to a handset (page 11).

Delete List

Delete **all** entries in the directory.

Copy List (depending on the receiving handset)

Send complete list to a handset (page 11).

Available Memory



Display the available entries in the directory (page 10).


Using quick dial keys

- Press and **hold** the required quick dial key.

Sending the directory list to another handset**Requirements:**

- ◆ The sending and receiving handsets must both be registered to the same base station.
- ◆ The other handset and base station can send and receive directory entries. Please read the relevant user guide for further information.

 →  (select entry) → **Options** (open menu) → **Copy Entry / Copy List**

 Enter the internal number of the receiving handset. You see Copying entry.

Yes / No Press the display key.



A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Please remember:


- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

Storing anniversaries in the directory

You can store an anniversary for every number in the directory, and specify a time when you will receive a reminder call on the anniversary.

 →  (Select entry; page 10)

View Edit Press display keys one after the other.

 Scroll to the Annivers.: line.

Edit Press the display key.

- Change multiple line input:

Date:

Enter the day/month in 4-digit format.

Time:

Enter the hour/minute for the reminder call in 4-digit format.

Prompt:


Select the type of signal for the reminder and press **OK**.

- Save changes (page 21).


Note:

Reminder calls require a time stamp. If you select a visual signal, then a time stamp is not required and is automatically set to 00.00.

Deleting anniversaries

 →  (Select entry; page 10)

View Edit Press display keys one after the other.

 Scroll to the Annivers.: line.

Edit Delete Save

Press display keys one after the other.

Reminder call on an anniversary

A reminder call is signalled on the handset using the selected ringtone.

Using a handset as a room monitor

Silence

Press the display key to stop the reminder call.

Last number redial list

The last number redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, then the corresponding name will be displayed.

Manual last number redial



Press the key **briefly**.



Select entry.



Press the talk key again. The number is dialled.

When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

Managing entries in the last number redial list



Press the key **briefly**.



Select entry.

Options

Open the menu.

The following functions can be selected with

Display Number (as in the directory, page 10)

Copy to Directory

Copy an entry to the directory (page 10).

Delete Entry (as in the directory, page 11)

Delete List (as in the directory, page 11)

Opening lists with the message key

An advisory tone sounds as soon as a **new entry** appears on a list. The key flashes (it goes off when the key is pressed). In idle status, the displays shows an icon for the new message.

If you press the key, you access the lists which contain new messages.

Using a handset as a room monitor

If the room monitor is activated, a previously stored destination number is called as soon as a set noise level is reached. You can store an internal or external number in your handset as the destination number.

The room monitor call to an external number stops after approx. 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). While the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringtone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated.

If you switch off the handset, the room monitor mode is deactivated. You must reactivate the function after switching on the handset again.

Caution!

- You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.
- When the function is switched on the handset's operating time is severely reduced. If necessary, place the handset in the charging cradle. This ensures that the batteries do not run down.
- Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

Activating the room monitor and entering the number to be called

 →  → Room Monitor

- ▶ Change multiple line input:


Room M.:

Select On to activate.

Call to:

Press the display key **Edit** and enter destination number.

External number: select number from the directory or enter directly. Only **the last 4 digits** are displayed.


Internal number: delete any stored external number. **INT**  (select handset or Call All, if all registered handsets are to be called) **OK**.

Save numbers with **Save**.

Level:


Set noise level sensitivity (Low or High).

- ▶ Save changes (page 21).

The function is now activated. With , you can move directly to settings.

Changing previously set external destination number

 →  → Room Monitor

 Scroll to the Call to: line.

Edit

Press the display key.

<C

Delete existing number.

- ▶ Enter number as described in "Activating the room monitor and entering the number to be called" (page 13).
- ▶ Save changes (page 21).

Changing previously set internal destination number



→ Room Monitor



Scroll to the Call to: line.

Edit

Press the display key.

Yes

Press the display key to confirm the prompt.

- ▶ Enter number as described in "Activating the room monitor and entering the number to be called" (page 13).
- ▶ Save changes (page 21).

Deactivating the room monitor remotely

Requirements: The phone must support touch tone dialling and the room monitor is set for an external destination number.

- ▶ Take the call from the room monitor and press keys **9** **#**.

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings on the handset (e.g. no ring-tone) will however remain activated until you press the display key **Off** on the handset.

To reactivate the room function with the same phone number:


- ▶ Turn on the activation again and save with **Save** (page 13).


Handset settings

Changing the display language

You can view the display texts in different languages.


 
 
 →  → Handset → Language

The current language is indicated by .


 Select a language and press **OK**.

 Press and **hold** (idle status).

If you accidentally choose a language you do not understand:


 
 **5**  **4**  **1**

Press keys one after the other.

 Select the correct language and press **OK**.


 
Setting the display

You have a choice of four colour schemes and several different contrasts.

 →  → Display

Colour Scheme

Select and press **OK**.

 Select a colour scheme and press **OK** ( = current colour).

 Press **briefly**.

Contrast Select and press **OK**.

 Select contrast.

 
Save Press the display key.

 Press and **hold** (idle status).

Setting the screen picture

You can display a screen picture (picture or digital clock) when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screen picture is not displayed in certain situations, e.g. during a call or when the handset has been deregistered.

If a screen picture has been activated, the menu item **Screen Picture** is marked with .

 →  → Display → Screen Picture

The current setting is displayed.

► Change multiple line input:

Activation:

Select **On** (screen picture is displayed) or **Off** (no screen picture).

Selection:


Change screen picture if necessary (see below).

► Save changes (page 21).

If the screen picture conceals the display, press the end call key briefly to show the idle display with time and date.

Changing the screen picture

 →  → Display → Screen Picture

 Scroll to the **Selection** line.

View Press the display key. The active screen picture is displayed

 Select **Picture/Clock**.

Save Press the display key.

► Save changes.

Setting display illumination

Depending on whether or not the handset is in the charging cradle you can set different levels of display illumination. If the charging cradle is switched on, the display is permanently dimmed.

 →  → Display → Lighting

The current setting is displayed.

► Change multiple line input:

In Charger

Select **On** or **Off**.

Outside Charger

Select **On** or **Off**.

Save

Press the display key.

Press and **hold** (idle status).**Note:**

When the display illumination is switched on, the standby time of the handset is reduced to approx. 30 hours.

Activating/deactivating auto answer

If you have activated this function, when you get a call you can simply lift the handset out of the charging cradle without having to press the talk key .

→ → Handset

Auto Answer

Select and press **OK** (= on).Press and **hold** (idle status).

Adjusting the loudspeaker volume

You can set the loudspeaker volume for handsfree talking to five different levels and the earpiece volume to three different levels. You can only make these adjustments during a call.

The handsfree volume can only be adjusted when this function is set.

You are conducting an external call.

Open menu.

Select volume.

Save

Press display key if necessary to save the setting permanently.

If is assigned a different function:

Options Open menu.

Volume Select and press **OK**.

Configure setting (see above).

Changing ringtones

◆ Volume:

You can choose between five volumes (1–5; e.g. volume 2 =) and the "Crescendo" ring (6; volume increases with each ring =).

◆ Ringtones:

You can choose between 15 different melodies.

You can configure the following functions with different ringtones:

- ◆ **Ext. Calls** : For external calls
- ◆ **Internal Calls** : For internal calls
- ◆ **All**: The same for all functions

Settings for individual functions

Set the volume and melody depending on the type of signalling required.

→ → Audio Settings →

Ringer Settings

Setting, e.g. select Ext. Calls and press **OK**.

▶ Change multiple line input:

Set volume (1–6).

Scroll to the next line.

Select melody.

Save

Press the display key to save the setting.

In idle status, you can also open the menu Ringer Settings by pressing briefly.

Settings for all functions to ring the same

→ → Audio Settings →

Ringer Settings → All

▶ Set volume and ringtone (see "Settings for individual functions").

Yes

Press the display key to confirm the prompt.



Press and **hold** (idle status).


Activating/deactivating the ringtone

Before answering a call or while your handset is in idle status, it is possible for you to cancel the ringtone permanently or for the current call. The ringtone cannot be re-activated while an external call is in progress.

Deactivating the ringtone permanently



Press the star key and hold until you can no longer hear the ringtone.

The  icon appears in the display.

Re-activating the ringtone



Press and **hold** the star key.

Deactivating the ringtone for the current call



Press the display key.


Activating/deactivating the alert tone

In place of the ringer tone you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringtone.



Press and **hold** the star key and **within 3 seconds**:



Press the display key. A call is now signalled by **one** brief alert tone. You will now see  in the display.

Activating/deactivating advisory tones

Your handset uses 'advisory tones' to tell you about different activities and statuses. The following advisory tones can be activated and deactivated independently of each other:

- ◆ **Key beep**: Each key press is acknowledged.
- ◆ **Acknowledge tones**:
 - **Confirmation tone** (rising tone sequence): at the end of the entry/

setting and when an SMS or a new entry arrives in the answering machine list (depending on base) or the calls list

- **Error beep** (descending tone sequence): when you make an incorrect entry
- **Menu end tone**: when scrolling at the end of a menu

- ◆ **Battery tone**: the batteries need to be charged.

 →  → Audio Settings → Advisory Tones

- ▶ Change multiple line input:

Key Tones:

Select On or Off .

Confirm.:

Select On or Off .

Battery:

Select On, Off or In Call. The battery tone is activated/deactivated or only sounds during a call.



- ▶ Save changes (page 21).

You cannot deactivate the confirmation tone for placing the handset in the charging cradle.

Setting the alarm clock

Requirement: the date and time have already been set (page 6).

Activating/deactivating the alarm clock and setting the wake-up time

 → 

- ▶ Change multiple line input:

Activation:

Select On or Off .

Time:

Enter the wake-up time in 4-digit format.


Melody:

Select melody.

Volume:

Set the volume (1-6).

- Save changes (page 21).

You will see the  icon.

A wake-up call with the selected ringtone melody is signalled on the handset. The wake up call sounds for 60 seconds. The display shows an Alarm Clock . If no key is pressed the wake-up call is repeated twice at five minute intervals and then switched off.

During a call, the wake-up call is signalled by a short tone.

Deactivating the wake-up call/ repeating after a pause (slumber mode)

Requirement: A wake-up call is sounding.

OFF Press the display key. The wake-up call is deactivated.

or

 
Snooze Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

Restoring the handset default settings

You can reset any individual settings and changes that you have made. This will not affect entries in the directory or calls list, nor the handset's registration to the base station.

 →  → Handset → Reset Handset

Yes Press the display key.

Cancel the restoring process by pressing  or the display key **No**.

 Press and **hold** (idle status).

Appendix

Care

- Wipe the charging cradle and the handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid

If the handset has come into contact with liquid:

 

1. **Switch the handset off and remove the batteries immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Faults and Self-help with Troubleshooting

Not every fault is due to a defective phone. In certain circumstances, it can come from a brief interruption in the power supply to the base station (unplug/ plug in power supply) or if the batteries of the handset are removed and inserted again. The following instructions should be of help for specific faults.

Important: problems or faults can only be remedied if you bring the complete unit (base station, handset, as well as connecting cable) to the place of purchase.

<p>The display is blank.</p> <ol style="list-style-type: none"> The handset is not switched on. <ul style="list-style-type: none"> Press and hold the end call key . The batteries are flat. <ul style="list-style-type: none"> Charge or replace the batteries (page 4).
<p>"Base station x" is flashing in the display.</p> <ol style="list-style-type: none"> The handset is outside the range of the base station. <ul style="list-style-type: none"> Reduce the distance between handset/ base station. The handset has been de-registered. <ul style="list-style-type: none"> Register the handset (page 5).
<p>Base Search is flashing in the display.</p> <p>Handset is set for Best Base and no base station is within range.</p> <ul style="list-style-type: none"> Reduce the distance between handset/base station.
<p>Handset does not ring.</p> <p>The ringtone is switched off.</p> <ul style="list-style-type: none"> Activate the ringtone (page 16).
<p>The other party cannot hear you.</p> <p>You have pressed the  (INT) key. The handset is "muted".</p> <ul style="list-style-type: none"> Switch on the microphone again (page 8).
<p>You hear an error tone when keying an input (a descending sequence of tones).</p> <p>Action has failed/invalid input.</p> <ul style="list-style-type: none"> Repeat the operation. Watch the display and refer to the operating instructions if necessary.

Warranty/Maintenance/Repair/Authorisation

Warranty

The warranty period is 2 years as of the date of purchase.

For warranty repair, the warranty card, filled out and stamped by the place of purchase must be included with the defective device.

Excluded from the warranty are damages due to improper use, wear and tear, or tampering by others. The warranty does not include consumed materials and deficiencies which only affect the value or capability for use inconsiderably.

In case of an error, please contact your place of purchase.

Repair/Maintenance

Rental devices

If your phone does not operate properly, notify Technical Assistance (phone number 175).

The repair* and the fault action are free of charge.

Purchased devices

Repair services are performed free of charge within the warranty period in accordance with the regulation of the warranty certificate). If a repair is necessary, the device must be returned to the place of purchase.

If Technical Assistance is made available (during the warranty period as well**), the fault action is charged (route lump sum price as well as time expenses). The repair costs are additional outside the warranty period.

Batteries

Battery cells are considered consumed material, which is not covered by the warranty service. Defective batteries are not

* except for damage to wearing parts (cables, labels, batteries etc.) and damage arising from incorrect handling such as dropping it or allowing fluid to penetrate into handset etc.

** except for damage to wearing parts (cables, labels, batteries etc.) and damage arising from incorrect handling such as dropping it or allowing fluid to penetrate into handset etc.

replaced free of charge. This applies to rental and purchased devices.

Help

If you have any general questions about products, services, etc., please contact your Swisscom Information Centre (toll-free number 0800 800 800).

Authorisation

This device can be used throughout the European Economic Area inc. Switzerland. Country-specific conditions have been taken into account.

If you have any questions about the differences between the public phone networks, please contact your specialist dealer or network provider.

Swisscom hereby declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

CE 0682

The Declaration of Conformity can be found on the following web site:
www.swisscom.com under the rubric Online Shop, Phone, Declaration of Conformity or can be ordered from the following postal address:

Swisscom Fixnet AG
 RES-Voice
 Customer Premises Equipments (CPE)
 3050 Bern

Specifications

Recommended batteries

(Valid at the time of going to press)

Nickel-metal-hydride (NiMH):

- ◆ Sanyo Twicell 650
- ◆ Sanyo Twicell 700
- ◆ Panasonic 700mAh "for DECT"
- ◆ GP 700mAh
- ◆ Yuasa Technology AAA Phone 700
- ◆ Varta Phone Power AAA 700mAh
- ◆ GP 850 mAh
- ◆ Sanyo NiMH 800
- ◆ Yuasa Technologies AAA 800

The handset is supplied with recommended batteries.

Handset operating times/charging times

Capacity	650 mAh
Standby time	approx. 170 hours (7 days)
Calling time	approx. 13 hours
Charging time	approx. 6 hours

The operating and charging times apply only when using the recommended batteries.

Note:

When the display illumination is switched on, the standby time of the handset is reduced to approx. 30 hours.

General specifications

Handset dimensions	144 x 52 x 29 mm (L x W x H)
Weight of handset with batteries	128 g

Notes on the operating instructions

This section explains the meaning of certain symbols and typographical conventions that are used in this user guide.

Symbols used

Copy Entry / Copy List (example)

Select one of the two menu functions specified.



Save

Enter digits or letters.

The display keys' current functions are shown reverse highlighted in the bottom display line.



Press the top or the bottom of the control key: scroll up or down.



Press the right or left of the control key: e.g. select setting.



/ 0



 
etc.


Press the corresponding key on the handset.

Example: menu input

In the user guides, the steps you need to perform are shown in abbreviated form. This is illustrated below using the example of "Contrast". The things you have to do are explained in the boxes.



→  → Display

- ▶ With the handset in idle status, press on the right of the control key to open the main menu.
- ▶ Select the  icon using the control key - press the control key at the top or bottom.

In the display header, **Settings** is displayed.

- ▶ Press the display key **OK** to confirm the function **Settings**.

The **Settings** submenu is displayed.

- ▶ Press the bottom of the control key repeatedly until **Display** is selected.
- ▶ Press the display key **OK** to confirm the selection.

Contrast Select and press **OK**.

- ▶ Press the bottom of the control key repeatedly until **Contrast** is selected.
- ▶ Press the display key **OK** to confirm the selection.



Select contrast and press **OK**.

- ▶ Press right or left on the control key to select the contrast.
- ▶ Press the display key **Save** to confirm the selection.



Press and **hold** (idle status).

- ▶ Press and hold the end call key until the handset returns to idle status.

Example: multiple line input

There are many situations in which you can change the settings of a display or enter data in several lines.

In this user guide symbols are used to guide you step by step through multiple line input. This is illustrated below using the example of "Setting the date and time". The things you have to do are explained in the boxes.

You will see the following display (example):

Date:


Enter day, month and year in 6-digit format.

The second line is marked with [] to show it is active.

- ▶ Enter the date using the digit keys.

Time:


 
Enter hours/minutes in 4-digit format.

- ▶ Press the  key.

The fourth line is marked with [] to show it is active.

- ▶ Enter the date using the digit keys.





 
- ▶ Save changes.

- ▶ Press the display key  **Save**.
- ▶ Then press and **hold** the  key.

 

The handset changes to idle status.

Writing and editing a text message

The following rules apply when writing a text message:

- ◆ Control the cursor with    .
- ◆ Characters are added to the left of the cursor.
- ◆ Press the star key  to show the table of special characters.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

 
 
Entering special characters

You can call up the table of special characters when writing an SMS using the  key. Select the required character and insert it with .

Writing an SMS/name (without predictive text)

Requirement:

Your base station must support SMS.

Press and **hold** the hash key  to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key  **before** entering the letter.

The following applies when writing an SMS:

- ◆ The display shows whether upper case, lower case or digits is selected. "Abc", "abc" or "123" appears at the top right of the display.
- ◆ When you press a key and **hold** it, the characters of that key appear in the **bottom display line** and are highlighted one after the other. When you release the key the highlighted character is inserted into the input field.

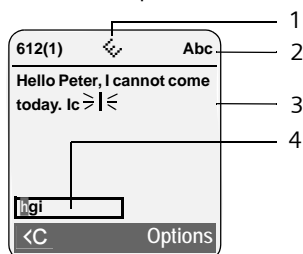
Writing SMS (with predictive text)

Requirement:

Your base station must support SMS.

EATONI predictive text helps you when you are writing text messages.

Each key between **0** and **9 keys** is assigned several letters and characters. These appear in a selection line immediately under the text panel (above the display keys) as soon as you press a key. The letter you are most likely looking for is shown in reversed highlights and is at the beginning of the selection line. It is copied into the text panel.



- 1 EATONI is activated
- 2 Upper/lower case or digits
- 3 SMS text
- 4 Selection line

If this letter is the one you want, confirm it by pressing the next key. If it is not the one you want, **briefly** press the hash key **#R** repeatedly until the required letter is reverse-highlighted on the display line and copied into the text panel.

If you press and **hold** the hash key **#R** you switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc".

Deactivating/activating predictive text

Requirement: You are writing a text message.

Options Press the display key.

Predictive Text

Select and press **OK** (**✓** = on).



Press the end call key **briefly** to return to the text panel.
Enter the text.

Note:

EATONI predictive text is deactivated by default.

Order of directory entries

The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory. Names which you have preceded with an asterisk will move to the end of the directory.

Accessories

Handset Aton CL300

- ◆ Illuminated colour display (4096 colours)
- ◆ Illuminated keypad
- ◆ Handsfree operation
- ◆ Polyphonic ringer melodies
- ◆ Directory for around 150 entries
- ◆ SMS (CLIP must be enabled)
- ◆ Headset socket including Headset
- ◆ Room monitor



Charger CL100 / CL300

(Including mains adapter)



Accessories and battery packs are available from the Swisscom shop and mobile phone retailers, or you can order them directly from the Internet at www.swisscom.com/OnlineShop.

Only use original accessories. This will avoid possible health risks and damage, and also ensure that all the relevant regulations are complied with.

Index

A

- Accessories 23
- Acknowledge tones 16
- Activating
 - advisory tones 16
 - call acceptance 15
 - handset 8
 - room monitor 13
- Adjusting
 - loud speaker volume 15
- Advisory tones 16
- Alarm clock
 - setting 16
- Alert tone 16
- Anniversary 11
- Answering a call 7
- Auto answer 7, 15

B

- Base station
 - changing 7
- Battery
 - fitting 4
 - recommended batteries 19
- Battery icon 6
- Battery pack
 - charging 6
- Battery tone 16
- Best base station 7

C

- Call
 - ending 7
 - external 7
 - internal 8
- Call acceptance 15
- Call duration 7
- Calls list 12
- Cancelling (operation) 9
- Care, phone 17
- Changing
 - destination number 13
 - display language 14
 - ringtone 15
- Character set, see Special characters . 21
- Charge status display 1, 6
- Confirmation beep 16

- Control key 1, 8
- Correcting incorrect input 10
- Customer Care 18

D

- Deactivating
 - handset 8
- Default settings
 - handset 17
- Delete key 9
- Deleting
 - characters 10
- Digital clock 14
- Directory 10
 - managing entries 10
 - opening 8
 - order of entries 22
 - saving anniversary 11
 - saving entry 10
 - sending entry/list to handset 11

Display

- changing display language 14
- colour skin/contrast 14
- display keys 9
- illumination 14
- in idle status 9
- keys 1
- memory 11
- screen picture 14
- setting 14
- wrong language 14

E

- Earpiece mode 7
- Earpiece volume 15
- EATONI (predictive text) 22
- End call key 1, 7
- Ending a call 7
- Entering special characters 21
- Error beep 16
- Example
 - menu input 20
 - multiple line entry 21

F

- Fast access
 - assigning key 1 1

G

- Group call 8

H**Handset**

activating/deactivating	8
advisory tones	16
changing to best reception	7
changing to different base station. . . 7	
contact with liquid	17
display illumination	14
display language	14
idle status	9
list.	8
loudspeaker volume.	15
muting	8
operating and charging times.	19
registering	5
registering on another base station. . 7	
restoring default settings	17
screen picture	14
using room monitor	12
Handset charging times.	19
Handset operating time.	19
in room monitor mode.	13
Handsfree key	1
Handsfree talking	7
Hash key	1
Headset socket	6
Hearing aids	3

I**Icon**

alarm clock	17
ringtone	16
Idle status (display)	9
Idle status, returning to	9
Incorrect input (correction)	10
Internal call.	8

K

Key 1 (fast access).	1
Key click	16
Keys	
assigning directory entry	10
cancel key	9
control key.	1, 8
delete key	9
display keys	1, 9
end call key	1, 7
fast access.	1
handsfree key	1
hash key	1

menu key	9
message key	1
On/Off key	1
quick dial	10
star key.	1, 16
Swisscom Voice Portal	1
talk key.	1, 7

L

Language, display.	14
Last number redial list	12
Last number redial, manual	12
Liquid	17
List	
handsets.	8
last number redial list	12
Loudspeaker volume.	15

M

Mains adapter	3
Making calls	
answering a call	7
external	7
internal.	8
Manual last number redial	12
Medical appliances.	3
Memory	
directory.	11
Menu	
back one menu level	9
end tone.	16
key	9
open.	8
Menu input	20
Message key	
opening lists	12
Messages	
key.	1
Microphone	1
Multiple line entry	21
Muting.	8

N**Number**

as destination for room monitor. . . . 13	
saving in directory.	10

O

On/Off key	1
Open	
menu	8

Index

Opening
 directory 8
Order of entries in directory 22

P

Pack contents 4
Phoning
 internal 8
Predictive text 22

Q

Quick dial 10, 11

R

Registering (handset) 5
Reminder call 11
Reset 17
Ringtone
 changing 15
 setting melody 15
 setting volume 15
Room monitor 12
 activating 13
 entering destination number 13
 sensitivity 13

S

Safety precautions 3
Screen picture 14
Searching in directory 10
Sending
 directory entry to handset 11
Setting
 alarm clock 16
 date 6
 display illumination 14
 display language 14
 loud speaker volume 15
 ringtone volume 15
 screen picture 14
 time 6
 volume, melody 15
Setting melody 15
Setting the date 6
Setting the time 6
Settings, see Setting
Signal beep, see Advisory tones
Slumber mode 17
Sound
 ringtone 15
Specifications 19

Star key 1, 16
Swisscom Voice Portal
 key 1

T

Talk key 1, 7
Text
 writing, editing 21

V

VIP 11
Volume
 earpiece 15
 handset loudspeaker 15
 loudspeaker 15
 ringtone 15
 setting 15

W

Wait melody 8
Warning beep, see Advisory tones
Writing 21

